Systemline

CL-TSK

Colour Touchscreen Keypad

User Guide

SWITCHING THE SYSTEM ON

There are two ways of switching the system on...

Standby Screen

❶ Press the “power” button (hard button on top left hand side of screen) and it will switch the zone on and select input 1 which is normally a radio tuner – so by doing this, you will always hear something.

❷ Press the “Home” button (hard button on bottom left hand side of screen) to go to the Home page and from there, select the source you want to watch or listen to.

Note: *Source symbols are normally displayed in blue. If a source symbol is displayed in orange, it means that the source is already being used by another person in another location. You can go ahead and listen, but it would be polite not to change stations or tracks.*

Radio play screen

Home Screen

12:56pm
Tuner
CD
Satellite
Local
DVD
Music Svr
Music Svr
Systemline

NAVIGATING THE SYSTEM

The starting point is the Home Screen. If you are not on the Home Screen, simply press the Home button ( ) until the Home Screen appears (the Home button is also a back button, so you may need to click on this more than once).

Selecting a Music Server source from the home screen

From the Home Screen, click on the Music Server source icon. This will take you to the “Play Screen”. From the play screen, you can simply press play to start listening to music.

Server play screen

To select and navigate to your music selection, click on “Select Music” button. This will take you to the Server Navigation screen. Other “buttons” are for play, stop, pause, skip forward/back & random & repeat. The random and repeat functions are two-way buttons and will read white out of black when activated.

Now you can navigate by Albums, Artists or Selections

Server navigation screen

Music Selection Screen

You can choose music by either Album or Artist, or by what we call **selections**.

Selections are a series of ‘playlists’ which are generated from the Music Server. Playlists are selections of favourite tracks and/or albums usually with a theme, such as “Pete’s favourite rock music”, they can also include genres.

Selecting by album or a Selections playlist will take you straight to the Play screen. Selecting by Artist will take you to an album list and then to the Play screen. If at any time you wish to exit the Music Selection Screen without changing the music, press the Home button to revert to Play screen.

SELECTING TUNER FROM THE HOME SCREEN

Brings up Tuner play screen

The Tuner consists of two screens. The first is the play screen which will display the details of the selected radio station. This will normally consist of the actual station name followed by its genre and often some accompanying text. The text can consist of up to 120 characters. To view this in its entirety, click on the text to expand the field to show all of the text information. Click again on the text to revert to normal display. A signal strength bar completes the main display. On the left hand side there are buttons to switch between DAB & FM. There is also a button to enter the Pre-sets screen and two further buttons to tune up or down.

Note: *In DAB mode, this will always scan to the next station, but in FM mode, the Arcam tuner does not support this feature, so it just adjusts the frequency.*

The tuner pre-sets screen

Click on the Pre-sets button on the play screen and the pre-sets screen will appear. Up to 12 pre-set stations can be stored and four of these are visible at a time. Scroll buttons at the bottom of the screen enable you to scroll up or down to the next set of pre-sets. The pre-set buttons are labelled automatically from the radio station text field, so there is no need to manually label the buttons.

Note *For each pre-set, the Arcam tuner takes about 30 seconds to load the station text in to the pre-set text field of each of the Touch Screens. Once loaded, this information will be retained until the system is disconnected from the power supply.*

To escape from this screen, either select a pre-set and this station will appear (after a short delay) on the play screen. Alternatively click on the back button (bottom left), or press the Home button to return to the play screen.

BASIC CONTROLS

Depending on the source you have selected, you will either be presented with a “play” screen for 2-way devices like the Arcam DAB/FM tuner or Systemline Music Server, or a screen of “soft” buttons to control one-way devices such as CD players, satelite boxes etc. The video output of any A/V devices such as DVD players or satellite boxes will automatically be switched to the AV input of a TV (subject to the inclusion of a Systemline Modular video hub).

At the top of the screen left to right is:

Clock – time of day

Alarm bell – this will be dim if alarm is not set

Volume level bar – displays volume level

Mute – dim if muted

Pressing the Power button will always switch the zone off

Pressing the Home button will always revert to previous screen and then back to the Home screen

NOTE *After about 10 minutes in standby, the back light will be switched off. This is the “sleep” state.*

ONE-WAY SOURCES
(CD, Satellite, DVD etc.)

These are mapped with a button layout to suit the particular source device being controlled and this mapping will largely correspond in terms of functionality with the buttons on the Systemline Modular LRN7 handset. In the case of A/V devices, navigation is aided by the display on the TV screen.

LOCAL INPUT

The local input is an input provided in the listening zone. It may just consist of a stereo audio input without IR control, or IR control may have been provided for. If the former, then control from the keypad is quite basic — just on/off & volume. If the latter, then full (one-way) control is possible.

ALARM FEATURE

An alarm can only be set from the standby screen, so it is first necessary to turn the system off.

By clicking on the bell icon you will enter the alarm screen

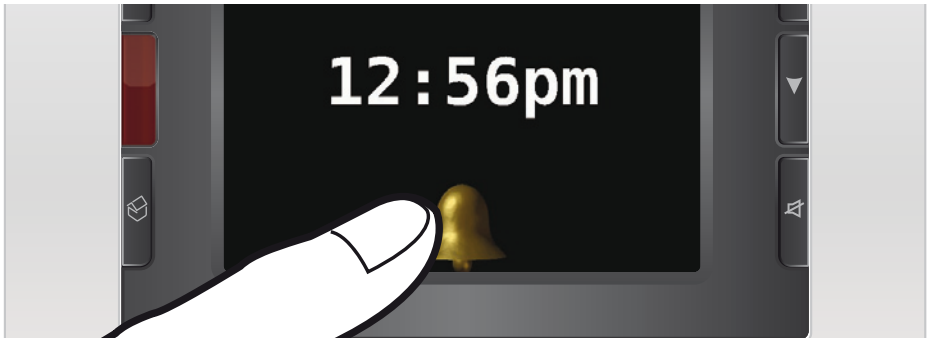

The Alarm Screen

The alarm screen permits you to set an alarm time and to select the source you want to be awakened by. The screen excludes sources deemed to be unsuitable for this function such as DVD players and non-IR inputs.

The set-up sequence is:

1 Set the alarm time by clicking on the scroll buttons

2 Select **AM** or **PM**

3 Select the source

4 Click **Set Alarm**

The system will then revert to the standby screen. The standby screen now displays a small bell symbol to the right of the time display.

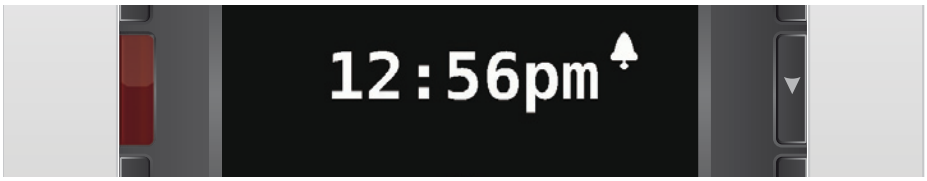

Cancelling the Alarm

To unset the alarm, just click on the large bell symbol on the Standby Screen and click the “unset” button on the Alarm screen.

AMBIENT LIGHT SENSITIVE DISPLAY

The Touch screen incorporates a light detector and this will automatically adjust both the screen brightness and the back illuminated hard button icons.

Note *When the system is in sleep mode, only the small red LED on the Power button will be illuminated.*

Notes

Notes

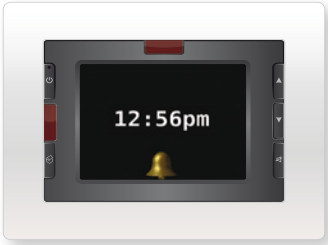

Systemline

www.systemline.co.uk

ARMOUR
HOME ELECTRONICS
Stortford Hall Industrial Park,
Dunmow Road, Bishops Stortford,
Hertfordshire CM23 5GZ
United Kingdom
www.armourhe.co.uk

Our policy is one of continuous product improvement, we reserve the right to change the designs and specifications without notice. All information is given in good faith. The manufacturer accepts no responsibility for errors, omissions or incorrect assumptions.
Armour Home Electronics 2006

ZINSXXX-ISS1-09/10/07